



By **Wi-Ex**.com[®]

zBoost YX745 User Guide



30 day money back guarantee when you buy directly from Wi-Ex[®]. If product is purchased from a reseller or third party, you must use their return policy.

1 Year Manufacturer Warranty. Register your zBoost[®] product at www.Wi-Ex.com

About zBoost® from Wi-Ex®

Wi-Ex® is the leader in cell phone signal boosters. zBoost® enhances the performance of your cell phone, PDA and wireless data card.

Compatibility – Dual Band zBoosts are compatible with 800MHz and 1900MHz regardless of technology- including CDMA and GSM.

Patented technologies protect the carrier network.

1-year manufacturer warranty – register your product at www.Wi-Ex.com.

zBoost® products have more awards, more sales and more locations than all other signal boosters ...COMBINED.

FCC Information

FCC ID: SO4YX545-PCS-CEL

Warning: Changes or modifications to this device not expressly approved by Wi-Ex® could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. In accordance with FCC requirements of human exposure to radiofrequency fields, the radiating element (antenna) shall be installed such that a minimum separation distance of 20cm (8in) is maintained from all persons.

Industry Canada Regulations

IC ID: 5544A-YX545PCSCCEL

This Class B digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

RF Exposure:The manufacturer's rated output power of this equipment is for single carrier operation. For situations when multiple carrier signals are present, the rating would have to be reduced by 3.5 dB, especially where the output is re-radiated and can cause interference to adjacent band users. This power reduction is to be by means of input power or gain reduction and not by an attenuator at the output of the device.

Cet appareillage numérique de la classe [B] répond à toutes les exigences de l'interférence canadienne causant des règlements d'équipement. L'opération est sujette aux deux conditions suivantes: (1) ce dispositif peut ne pas causer l'interférence nocive, et (2) ce dispositif doit accepter n'importe quelle interférence reçue, y compris l'interférence qui peut causer l'opération peu désirée.

Le fabricant nominale de la puissance de sortie de ce matériel est simple transporteur. Pour les situations lorsque plusieurs signaux porteurs sont présents, l'évaluation devrait être réduite de 3.5 dB, en particulier lorsque le signal de sortie est ré-émise et peut provoquer des interférences adjacentes à la bande utilisateurs. Ce pouvoir est de la réduction par le biais de la sortie d'alimentation ou la réduction de gain et non par un atténuateur à la sortie du dispositif.

Please note: This unit has been approved for use in Canada under RSS 131, however, consent for the use of this device to improve cellular or PCS coverage, must be obtained through your cellular or PCS provider, prior to placing the unit in operation. Please refer to the Industry Canada document CPC 2-1-05, Section 6.1 available or viewable at:

<http://www.ic.gc.ca/epic/site/smt-gst.nsf/en/sf08942e.html>

Safety and Product Warranty Information

Copyright Notice

This manual is copyrighted. All rights reserved. This manual, whole or in part, may not be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine readable form for distribution. This manual whole or in part, may not be modified without prior consent, in writing, from Wireless Extenders.

Copyright © 2010 by Wireless Extenders, Inc.

Trademarks

Wireless Extenders, Wi-Ex, the Wi-Ex logo, zBoost, the zBoost logo and Extending Cell Zones are registered trademarks of Wireless Extenders, Inc.

Safety Guidelines

In accordance with FCC requirements of human exposure to radiofrequency fields, the radiating element (antenna) shall be positioned such that a minimum separation distance of 8 inches (20cm) is maintained between the radiating element and the user and/or general population.

Limited Liability

In no event shall Wireless Extenders be liable for any direct, indirect, special, punitive, incidental, exemplary or consequential damages, or any damages, whether in an action under contract, negligence, or any other theory, arising out of or in connection with the set up of, use of, inability to use, or performance of the information, services, products, and materials available from this manual. These limitations shall apply notwithstanding any failure of essential purpose of any limited remedy. Because some jurisdictions do not allow limitations on how long an implied warranty last, or the exclusion or limitation of liability for consequential or incidental damages, the above limitations may not apply to you. For full warranty guidelines, see page 16.



Note

Changes or modifications not expressly approved by Wi-Ex® could void the user's authority to operate this equipment and/or void the product warranty.

Package Contents: zBoost® YX745

Before you begin, make sure all of the following parts came with your zBoost® YX745.

Item	Quantity	Part #	Description
1	1	DMAN-0044	YX745 Setup Overview
2	1	DMAN-0042	YX745 Manual
3	1	APCA-0031	YX745 Base Unit
4	1	CPSP-0010	Base Unit Power Supply, Black
5	1	YX031-10W	10' RG-8X extension coax
6	1	YX027-PCS-CEL	6/9dBi Directional PCS-CEL Indoor Antenna
7	1	YX026-CEL	11 dBi Yagi CEL Outdoor Antenna
8	1	YX023-PCS	13 dBi Directional PCS Outdoor Antenna
9	1	YX015	Dual Band Outdoor PCS-CEL Signal Combiner
10	1	AHDW-0002	Hardware Kit (anchors, feet, screws)

Optional zBoost® Accessories

The following accessories are available to improve signal reception and provide increased coverage in the building. Please see our website for complete selection.

To order, call 1-800-871-1612 or visit, www.Wi-Ex.com

YX745-Dual Band	Part #	Description
Most Popular Accessories for the YX745:		
X	YX055-CEL	CEL Directional Outdoor Yagi Antenna (15 dBi)
X	YX050-PCS-CEL	Omni-Directional transmitting ceiling-mount Base Unit Antenna (2 dBi PCS / 1 dBi CEL)
Other Accessories:		
X	YX012	Outside Grounding Kit
X	YX014	Outdoor J-pole Antenna Mounting Bracket
X	YX022-CEL	Omni-Directional receiving signal antenna upgrade (6 dBi)
X	YX024-PCS	Directional transmitting Base Unit Antenna upgrade (7 dBi)
X	YX028-PCS-CEL	Directional transmitting window-mount Base Unit Antenna upgrade (9 dBi PCS / 6 dBi CEL)
X	YX030-15W	15 ft. Signal Antenna coax extension, low-loss RG-6
X	YX030-35W	35 ft. Signal Antenna coax extension cable, low-loss RG-6
X	YX030-08W	8" flat window entry cable
X	YX699	RF Signal Meter

Table of Contents

About zBoost® from Wi-Ex®i
 FCC Information..... i
 Industry Canada Regulations i
Safety and Product Warranty Informationii
 Copyright Notice..... ii
 Trademarks ii
 Safety Guidelines ii
 Limited Liability ii
Package Contents: zBoost® YX745-PCS-CEL..... iii
Optional zBoost® Accessories iv
Table of Content 1
Overview..... 2
 Why Indoor Signals Can Be Weak 2
Preparing to Install the zBoost® Product..... 3
 Read First Before Installing the YX745..... 3
 Tools Needed 3
 Check for Signal Strength 3
 Determine the Needed Coverage Area..... 4
 Determine the Location of Signal Antennas and the Indoor Antenna..... 4
 Cable Requirements..... 4
 Grounding the Directional Signal Antennas..... 5
 Securing Cable with a Drip Loop..... 5
 Pre-Installation Guidelines 5
 Power Requirements 5
 Important Reminders 5
Installing Your zBoost® Signal Booster 6
 Placement of the Signal Antenna..... 6
 Mounting of Signal Antennas 6
 Antenna Aiming 7 & 8
 Running the Coaxial Cable to the Base Unit..... 8
 Mounting the Base Unit..... 8
 Installing the Indoor Antenna 9
 Illustration of YX745 setup in home 10
 Confirm That The zBoost® is Working Properly 11
 Improving The Coverage Area..... 11
zBoost® Base Unit Light Indicators 12
YX745 Technical Specifications..... 13
Frequently Asked Questions 14 & 15
zBoost® Warranty Information..... 16 & 17

Overview

Thank you for choosing zBoost®. You will now be able to use cell phones INSIDE the building. Gone are the days when one had to go to the window upstairs or walk outside to use a cell phone. Like a skylight that brings sunlight into a home, zBoost® transports and amplifies the outdoor cellular signals into the building.

By following the easy instructions in this user guide, you will be Extending Cell Zones™ into the building

Why Indoor Signals Can Be Weak

There are several obstacles that can contribute to the poor reception you receive in a building:

1. Location of the Cell Phone Tower in Relation to the building


While cell phone providers have tried to place cell phone towers to provide the best overall coverage, local ordinances and terrain features can impose restrictions on where these towers can be placed, thus, limiting the signal strength available at your location.

2. Obstructions Caused by Buildings, Terrain and Trees

Cell phone signals can be completely blocked or reflected by buildings, walls, trees, hills and other terrain features resulting in low signal strength.

3. Energy Efficient Windows

These new windows can also affect signal penetration into the house

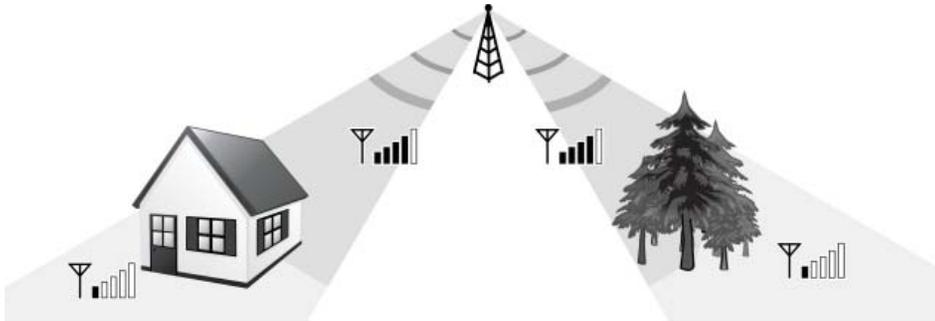

Note

Cell phone signal bars are approximate and vary from phone to phone. The number of bars can fluctuate widely, depending on the location of the phone, the position or angle of the phone, weather, etc. Most cell phone signal meters update every 6 to 10 seconds. An increase of only one bar typically indicates a 4x to 10x signal increase
THE BEST INDICATOR OF COVERAGE AREA IS THE ABILITY TO RELIABLY PLACE AND RECEIVE CALLS

Preparing to Install zBoost®

Read First Before Installing the YX745

Before unpacking this box, verify that your phone operates on the frequency band supported by this product. Note: The YX745 is not compatible with iDEN, Nextel, SMR or ESMR frequency services.

Tools Needed

The following tools are needed to set up zBoost®:

- #2 Philips screwdriver
- Cellular phone operating in the band supported by your zBoost® unit
- Drill (may be required for outdoor or attic antenna placement)

Check for Signal Strength

Before placing a zBoost® in a home, make sure that you can place calls on the outside of the building, in the attic, at roof level or wherever you plan to place the Signal Antenna. zBoost® can only bring signal into the building when signal reaches the Signal Antenna. If there is no signal, the zBoost® will not work for you.

Using your cell phone, place a call from an outdoor location to confirm that enough signal is present to complete the call. If a weak signal is available at ground level, check the signal strength in the attic or at roof level location where the signal will likely be stronger and where the Signal Antenna can be placed for best performance.

If you can reliably make and receive calls outside the building, then zBoost® can bring the signal into your home.


If only one signal bar is displayed on your cell phone outside, indoor coverage will be limited to one to two rooms. We recommend placing the Signal Antenna outside and/or purchasing a Wi-Ex® upgrade Signal Antenna for increased coverage (see page iv).

The YX699 Signal Meter (available separately) provides signal strength information. It can be used with its supplied whip antenna to find the best location for placement of the Signal Antennas by identifying the area of strongest signal. It can also be used to identify peak antenna alignment when connected directly via provided cable. Contact Wi-Ex to obtain a YX699 Signal Meter.



Determine the Needed Coverage Area

Identify the location in the building where you need signal coverage the most. The zBoost® YX745 can cover up to 12,000 square feet (coverage varies based on outdoor signal level, building construction, placement of antennas, and general installation care). Walls, ceilings or floors will reduce the coverage area.

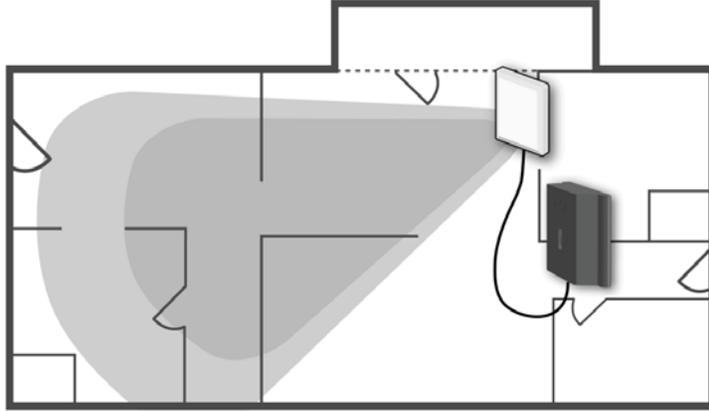

Determine the Location of Signal Antennas and Indoor Antenna

It is recommended that the Signal Antennas and Indoor Antenna have over 15 feet of vertical and 20 feet of horizontal separation.

If the antennas are too close together, the light on the Base Unit will flash red, indicating a problem see the Light Indicators section (Page 12). To capture the best signal, place the Signal Antenna as high as possible and position it vertically, keeping it at least 2 feet away from any metal.

Place the Signal Antennas as high as possible to capture the best signal.

See page 6, Installing Your zBoost® Product, for additional information.

Note: Coverage and Signal Antennas should be pointed AWAY from each other.

Cable Requirements

We suggest using RG-6 coaxial cable and F connectors which are rated for outdoor satellite TV use.

Coaxial cable is not provided with the YX745. After installing the Signal Antennas, run coaxial cable between antenna assembly and Base Unit. The recommended maximum cable length run for RG-6 is 85' and 125' for RG-11. It is highly recommended that you refrain from securing your cable, drilling any holes, etc. until you complete and test the installation of the Base Unit.

Caution: Before drilling any holes into a wall to run your cable, make sure you know where existing electrical wiring is located. Drilling into live electrical wiring could cause an electrical shock and sever the wire.



Note

Avoid placing the Signal Antenna near metal such as wiring, A/C ducts, metal siding, truss plates, etc. When connecting the cable to the antenna, run the cable straight down from the antenna. Avoid draping the coax near the antenna.


Grounding the Directional Signal Antennas

The Directional Signal Antenna assembly must be properly grounded when it is installed outdoors. This will help protect the customer's property and the Base Unit against lightning strikes during a lightning storm.

The installation must be in accordance with Article 810 of the National Electric Code (NEC). A listed antenna discharge unit must be provided for the lead-in coaxial cable per NEC article 8.10.20 or the shield of the coaxial cable must be permanently and effectively grounded in accordance with NEC article 8.10.21..

Securing Cable with a Drip Loop

When you install the Directional Signal Antennas, create a drip loop with the coaxial cable at the point where the cable enters the building through an outside wall. This can be done by twisting and securing the cable into a loop (no less than 4" across) near the entry point. This will help prevent moisture from gathering at entry point and leaking into the building.

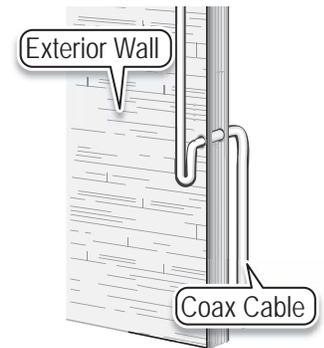

Pre-Installation Guidelines

Outdoor installation is preferred when the building is in an area of weak outdoor signal area (generally 1 to 2 bars as indicated on the cell phone).

Avoid any drilling or nailing directly into the roof. This could allow water to leak into the building and cause damage.

Choosing to mount the antenna into fascia will not compromise the roof and places the antenna up high.

Power Requirements

The Base Unit can be plugged into a standard 2-prong 110 VAC receptacle using the included power supply. The power supply consumes less than 10W (less than 0.2A).

Important Reminders:

- The required coaxial cable has not been provided.
- An exterior mounting mast has not been provided. Using 1.5" or more PVC pipe or a J-pole (available from Wi-Ex, part YX014) is suggested should one be needed.



Note

The zBoost® YX745 base unit MUST only be used with the provided power adaptor. Use of other power adaptors will void the warranty and may damage the unit. Use of other equipment is not FCC approved.

Installing Your zBoost® Signal Booster

Placement of the Signal Antennas


Choosing the best location for installation of the Signal Antenna provides the best performance and the largest area of improved signal. Determine the location which provides the strongest signal using the signal strength indicator on your cell phone. Find the location which provides the most bars of signal strength and locate the Signal Antenna at that location. This location will be typically found on the roof.

The YX699 Signal Meter (available separately) provides signal strength information. It can be used with its supplied whip antenna to find the best location for antenna mounting with the strongest received signal. It can also be connected to the directional antennas to aim the antennas for maximum received signal. Contact Wi-Ex to obtain a YX699 Signal Meter.

Mounting of Antennas

1. When you have determined the location of the strongest signal, install the antennas to a mast or j-pole (Not provided- Outdoor J-pole Antenna Mounting Bracket, YX014). Loosely tighten the antennas to the mast to allow the antennas to be reoriented for strongest signal.
2. Connect the provided coax from the Yagi antenna to the connection on the Signal Combiner marked CEL. Connect the supplied 18" coaxial jumper from the Panel antenna to the other Signal Combiner port marked PCS.

After installing the Signal Antennas to a mast or pole, connect them to the Signal Combiner (as pictured below). Make sure to connect PCS and CEL outputs to the matching antenna. Connecting the antenna to the wrong Signal Combiner port will not produce an improved signal. Then, connect either RG6 or RG11 (not included) coax cable to the opposite end of the Signal Combiner going to the Base Unit.

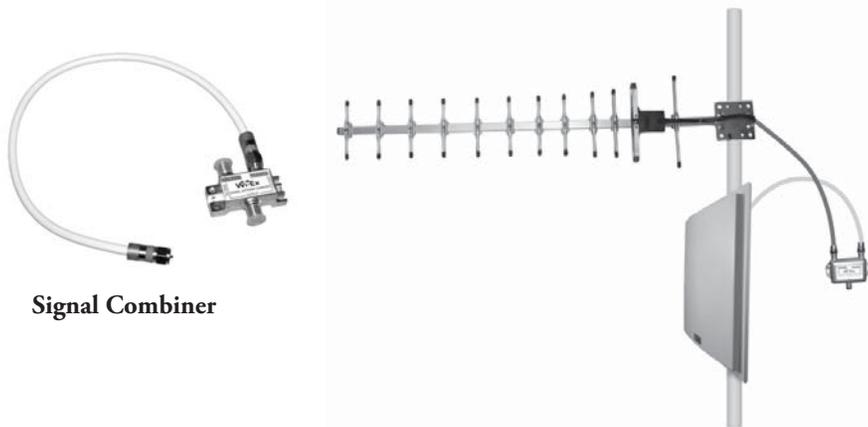

Signal Combiner

Outdoor Signal Antenna



Note

Avoid placing the Signal Antenna near metal such as wiring, A/C ducts, metal siding, truss plates, etc. When connecting the cable to the antenna, run the cable straight down from the antenna. Avoid draping the coax near the antenna.

NOTE: The zBoost® YX745 requires at least 15 feet of vertical separation between the Base Unit and the Signal Antennas. Generally, increasing this distance (up to 40 feet) will increase the performance and decreasing the distance will limit zBoost® performance. (If 15 feet of separation is not possible, you may try our new METRO model, which was designed for lofts and urban dwellings and requires no vertical separation.) Keep the Base Unit off the floor and at least 2 feet away from other cords, metal objects or other wireless devices such as wireless routers or wireless access points. The zBoost® performs best when there are no obstructions between the zBoost® Base Unit and your mobile device.

Upon initial power up, a solid GREEN light should appear indicating normal conditions. If a RED light appears, adjustments may be needed to optimize performance. If you find the increased signal coverage is acceptable, however, no additional adjustments are needed. See Light Indicator section (Page 12) for more information.

Antenna Aiming

To get the maximum benefit, you will want to take special care to make sure you point the antennas in the direction of the best signal for your wireless service provider. You may wish to use a YX699 RF signal meter to help during this process.

Note: The Outdoor Signal Antenna must be pointed AWAY from the Indoor Antenna. Additionally, it should be mounted of the roof edge, pointed away from the building.

If you do not know which direction the best signal is coming from, once the unit is installed, rotate the Signal Antennas in 90 degree increments while measuring the results inside the desired coverage area. In most cases both Signal Antennas should be aimed in the same direction.

1. Using a phone operating in the Cellular band, place the cell phone on a non-metal surface about 6-8 feet from the Base Unit.
2. Turn the signal booster on and wait 30 seconds. Note the number of signal bars displayed on your cell phone. For best results, you want to place your phone where the phone's signal meter displays in the middle of the signal meter range or less so that it can indicate as you rotate the Signal Antenna to the optimum direction. If it is reading too high, move the phone farther from the Indoor Antenna.
3. Record the number of signal bars or dBm _____(A) on your cell phone. You can use our YX699 RF Signal Meter or an application on a smart phone to get the dBm. Leave the phone in exactly the same place and pointing in the same direction for the following steps. Note the direction of the Yagi antenna starting position _____.
4. Rotate the Yagi antenna 90 degrees and then record the phone signal bars _____(B).
5. Continue to rotate the antenna another 90 degrees in the same direction and record the phone signal bars _____(C).
6. Again, rotate the antenna another 90 degrees in the same direction and again record the phone signal bars _____(D).
7. If you desire to optimize further, then look for the two highest signal bar readings above and move the antenna between these two points to find the highest signal bars reading.
8. Look for the highest reading above. Set the antenna to that position and tighten the antenna to the mast of your choosing. We suggest using at least 1.5" PVC pipe or J-Pole (YX014, not included).
9. Using a phone operating in the Cellular band, place the cell phone on a non-metal surface about 6-8 feet from the Base Unit.
10. Turn the signal booster on and wait 30 seconds. Note the number of signal bars displayed on your cell phone. For best results, you want to place your phone where the phone's signal meter displays in the middle of the signal meter range or less so that it can indicate as you rotate the Signal Antenna to the optimum direction. If it is reading too high, you may want to move the phone farther from the Indoor Antenna so that you are able to see the change when you reorient the Signal Antenna.

11. Record the number of signal bars _____(A) on your cell phone. Leave the phone in exactly the same place and pointing in the same direction for the following steps. Note the direction of the Yagi antenna starting position _____.
12. Rotate the Yagi antenna mast 90 degrees and then record the phone signal bars _____(B).
13. Continue to rotate the antenna mast another 90 degrees in the same direction and record the phone signal bars _____(C).
14. Again, rotate the antenna mast another 90 degrees in the same direction and again record the phone signal bars _____(D).
15. If you desire to optimize further, then look for the two highest signal bar readings above and move the antenna between these two points to find the highest signal bars reading.
16. Look for the highest reading above. Set the antenna to that position and tighten the antenna to the mast.

The majority of the time a cell tower will hold more than 1 frequency band and/or service provider, so aim the second Signal Antenna in the same direction. You may need to use a PCS phone.

To aim each antenna for maximum signal, you may need more than one cell phone, one operating in the Cellular band (typically AT&T, Verizon or Alltel) and one operating in the PCS band (typically Sprint, T-Mobile, Metro PCS, Cricket).’

Note: A 1 dBm increase is 25% gain in signal strength.

Running the Coaxial Cable to the Base Unit

Coaxial cable is not provided with the YX745. After installing the Signal Antennas and connecting them, you will need to run coaxial cable to the location where you plan to install the Base Unit. The recommended maximum cable length run for RG-6 is 85’ and 125’ for RG-11. It is highly recommended that you refrain from securing your cable, drilling any holes, etc. until you complete and test the installation of the Base Unit.

For example, if you plan to use the Base Unit in the living room of a two-story home, first run the cable from the attic down the stairs to the living room. After the Base Unit is installed and successfully working, find a more direct and permanent route for the cable (e.g., dropping it through the ceiling of a nearby closet).

Mounting the Base Unit


The Base Unit can also be easily mounted on a wall.

Perform the following steps to mount the Base Unit on a wall:

1. Attach the Base Unit to a suitable wall surface using the provided hardware kit. The Base Unit should be oriented with the indicator light near the top of the unit.
2. Attach the RG-8X coaxial cable from the Indoor Antenna to the Base Unit.
3. Attach the antenna to the Base Unit.
4. Attach the power supply to the Base Unit and plug the power supply into an outlet. See the Light Indicator section on (page 12) if a red light illuminates.

Installing the Indoor Antenna


The interior panel antenna is connected to the base unit using the provided 10’ RG-8X coax. It should be mounted on a wall facing the direction where increased coverage is desired.

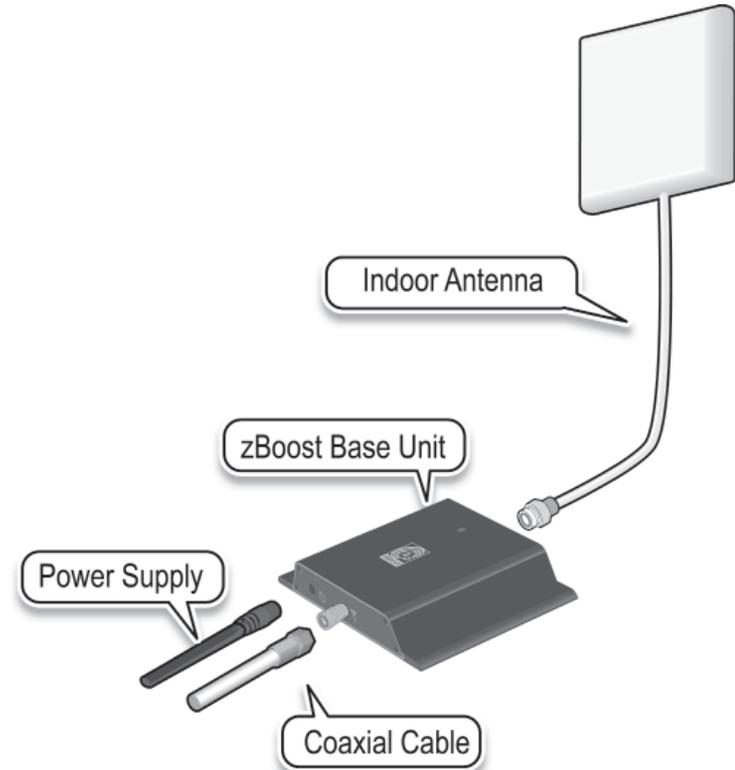

Base Unit with Indoor Antenna

Note

Before drilling any holes into a wall to run your cable, make sure you know where existing electrical wiring is located. Drilling into live electrical wiring could cause an electrical shock and sever the wire.

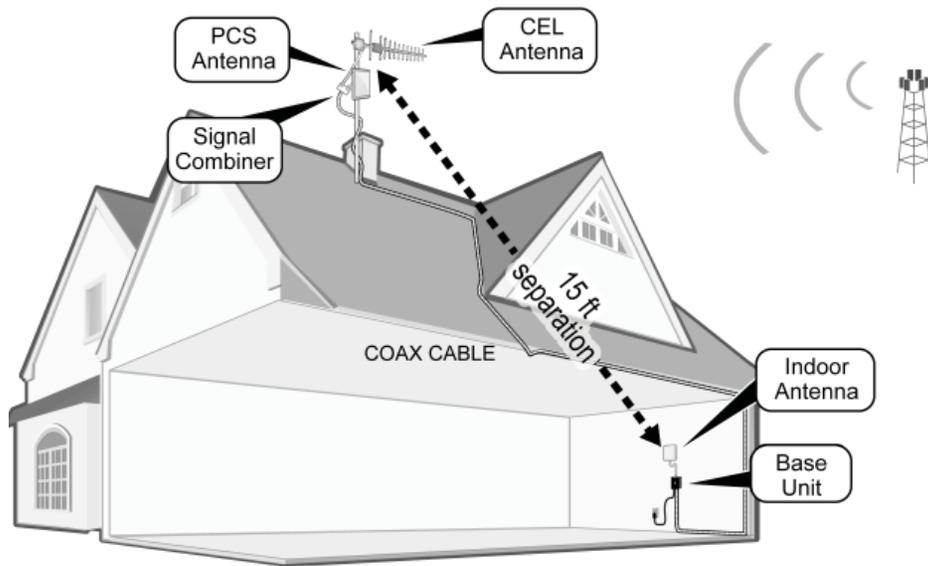

Confirm That The zBoost® is Working Properly

Perform the following steps to confirm that the unit is now working properly:

1. Unplug the Base Unit power cord.
2. Turn on your cell phone and check the signal meter.
3. Plug the power cord into the Base Unit.
4. Hold your cell phone about 5 feet from the Base Unit and then turn it on. Wait up to 1 minute for the cell phone to register the signal coming from the Base Unit.
5. If the signal meter shows an improvement, your zBoost® unit is working properly.

Improving The Coverage Area

With everything connected and the Base Unit plugged in, you should walk throughout the room and see that you are able to reliably place calls.

Remember, coverage varies based on outdoor signal level, building construction, and general installation care. Coverage in adjoining rooms (next to, above, or below) will be reduced due to the walls or the ceiling/floor.

Should you desire to improve coverage, you may:

- 1.) Move the Base Unit and/or adjust the angle of the Indoor Antenna.
- 2.) Move the Signal Antenna to a higher location in the attic or outside.
- 3.) Purchase a Signal Antenna Upgrade at www.Wi-Ex.com.

Note: Using a signal meter or an antenna application on a smart phone is a more accurate way to measure a stronger signal than the bars on a phone.

Upon initial power up, a solid GREEN LED should appear indicating normal conditions. If a RED light appears, adjustments may be needed to optimize performance. If you find the increased signal coverage is acceptable, however, no additional adjustments are needed. See Light Indicator section (page 12) for more information.



Note

Before drilling any holes into a wall to run your cable, make sure you know where existing electrical wiring is located. Drilling into live electrical wiring could cause an electrical shock and sever the wire.

zBoost® Base Unit Light Indicators

At Initial Power Up Only

Solid GREEN	Normal condition at power up.
Slowly Alternating RED and GREEN	zBoost® is working, but at reduced performance and coverage due to “non-ideal” setup. Solution: Increase the distance between Signal Antenna and Base Unit to achieve maximum performance and coverage.
Fast Flashing RED	Indicates insufficient distance between the antenna and the amplifier. The amplifier is operating at significantly reduced coverage. Solution: Increase space between base unit and antenna.
Solid RED	System is receiving signals from either the mobile device or the base station transceiver which are too strong for proper operation. Solutions: ① Move away from receiving antenna with your cell phone. ② Move antenna away from other devices..
Fast Alternating RED and GREEN followed by no light	The amplifier is disabled. Solution: Unplug and start over.

After Initial Power Up

Solid GREEN	Normal condition.
Solid RED	System is receiving signals from either the mobile device or the base station transceiver which are too strong for proper operation. Solution: Please unplug your system. Re-orient your Signal Antenna and/or Base Unit to reduce the excessive signal source. Plug your system back in. If still solid red, call customer support 1-800-871-1612.

Technical Specifications

YX745 PCS-CEL Technical Specifications

	PCS Frequency	CEL Frequency
Frequency	1850 - 1990 MHz	824 - 894 MHz
System Gain	75 dB	70 dB
Band Supported	ALL: A,D,B,E,F & C	ALL: A,B, A' & B'
Antenna Signal	13 dBi Panel; F-type female	11 dBi Yagi; F-type male
Antenna- Base Unit	9 dBi Panel; TNC male	6 dBi Panel; TNC male
Cable Loss	3000 MHz RG-6, approx. 1dB/10 ft.	3000 MHz RG-6, approx. 0.6 dB/10 ft.
Both PCS and CEL Frequencies		
Network Format	CDMA, GSM, TDMA, AMPS, GPRS, EDGE, EVDO, HSPA, 3G	
Base Unit RF Connectors	F-type female and TNC female	
Wall Supply Unit	100-240 VAC 50 Hz-60Hz	
Power Consumption	3W standby; 7W max signal - 2.0A Max	
System Certifications	UL, FCC Parts 15 & 24 (PCS), FCC Parts 15 & 22 (CEL), Industry Canada	
Base Unit Size and Weight	5" x 7" x 1.25" - 12 oz.	
Base Unit and Power Supply	Indoor Use Only, 0° to 45° C (32° to 113° F)	
Coverage (open areas)	4-5 signal bars at the roof antenna; 120' radius at 100° width; 3-4 signal bars inside; over 12,000 sq. ft.	
Handles all PCS or CEL protocols and included multiple patented and patent pending technologies to provide low-cost coverage while continually adapting to signal to prevent interference and remain transparent to the wireless network. Provides an indicator if the antennas are positioned improperly, but will NOT suffer damage of interfere with the Carrier Network.		

This product is covered by patent US 7,706,744. Other U.S. and foreign patents pending.

Frequently Asked Questions

What can I expect my cell phone signal range and strength to be inside my home or office?

The closer you are to the base, the stronger the signal. This will vary with different conditions. Some of the conditions that will affect the improved coverage area are signal strength outdoors, the type of building materials in the home, the placement of the unit and the antenna's proximity to cellular towers.

You can expect that your indoor coverage will be improved. You will be able to make calls where you couldn't before. The degree of improvement will depend upon many factors. The intent of zBoost® products are to bring outside coverage inside. Just as the signal bars move up and down when outside, the boosted signal will fluctuate in a similar fashion.

Is a cellular phone signal booster the same as a wireless router; will it help my Wi-Fi signal?

The Wi-Ex® unit will not help your WiFi service. This unit is designed to work with wireless PCS and Cellular phones and devices. The WIFI in your home or office operates on a different frequency.

Is your product available for international use?

Yes, we have products that work on European frequencies. Our zBoost® YX520-I- Dual band works on 900MHz and 1800Mhz.

We also sell zBoost® ONE YX400-U for UMTS/HSPA devices on the 2100MHz Frequency, a frequency used for voice and data overseas.

Why isn't my cell phone indicating more signal with more bars?

You may not always observe more bars that gain on your signal meter because of the signal spreading out from the antenna. If your phone has a dB meter, 3dB is a significant increase of 2x, 6dB is 4x, and 10dB is 10x. On a four bar phone, one "bar" equals about 10dB.

The increase in signal you will see depends upon:

- The level of signal at the Signal antenna (outdoor)
- The care of the antenna placement (two feet away from metal, adequate antenna separation [15 feet recommended])
- The signal already present inside (related to building losses)
- The distance of your phone/device from the Base Unit (signal spreads or diminishes rapidly with distance.)

There are usually several cell phones in use at one time in my home, will your product boost all of our signals simultaneously?

The zBoost® YX745 is designed to cover multiple signals simultaneously and will allow multiple users to operate at the same time.

Does the zBoost® work if you have no bars?

No, if no signal is present outdoors zBoost® products will not work for you. Also, keep in mind if your best signal is 1 bar at the Signal Antenna, your coverage will be limited to one or two rooms. You could improve that with an upgraded antenna. (See page iv).

Frequently Asked Questions

Where should I put my Wi-Ex base unit to get the best coverage?

You should install your base unit where you need coverage the most. The Wi-Ex base unit is the component that amplifies the signal inside. The coverage is improved in a circular manner from the base unit. The farther you are away from the base unit, the weaker the signal. The base could be placed in the family room, the basement, an office, a bedroom, a home office or a central location.

Note: if you install the Signal Antenna too close to the Base Unit, the system will shut down (red light will blink). This is a normal condition for this scenario. It just means that you need to ensure that you have sufficient distance between the 2 antennas; otherwise, it will detect feedback or noise and will automatically shut down.

Where is the best place to put my Wi-Ex Signal Antenna?

The Wi-Ex signal antenna should be placed at the highest point in your house in order to "catch" the strongest signal. This location could be in the attic or on the roof. The placement of the Signal Antenna is very important. It is best to place this in an un-obstructed area. If you install it outside, place it above the roof line. Or, this antenna can be placed in the area around your home that has the greatest signal strength.

Note: if you install the Signal Antenna too close to the Base Unit, the system will shut down (red light will appear). This is a normal condition for this scenario. It just means that you need to ensure that you have proper isolation between the 2 antennas; otherwise, it will detect feedback or noise and will automatically shut down.

My light is continually blinking

There are several reason that the zBoost® light could be blinking. Please see the Light Indicator section on Page 12 for specific answers.

Does the zBoost® work with all 3G data?

No, it only supports data that uses 1900 and 800 MHz frequency bands like iPhones, but not on smartphones that use 4G or 2100 MHz frequencies.

Warranty Information

Limited 1 Year Warranty

Register your product at www.Wi-Ex.com

Wi-Ex® warrants every Wi-Ex® product to be free from defects in material and workmanship under normal use for the warranty period of one year.

Who Is Covered?

You must have proof of purchase to receive warranty service. A sales receipt or other documentation showing the product purchased and the purchase date is considered proof of purchase. This limited warranty extends only to the original consumer purchaser or any person receiving the product as a gift from the original consumer purchaser and to no other purchaser or transferee. This warranty does NOT extend to commercial users.

What is Covered?

Warranty coverage begins the day you purchase the product. For one year from the original date, the Wi-Ex® Cell Phone Signal Booster will be repaired or replaced with a new, repaired, refurbished or comparable product (whichever is deemed necessary by Wi-Ex®) if it becomes defective or inoperative. The exchange will be made without charge to you for parts and labor. You will be responsible for the cost of shipping to the location designated by Wi-Ex®.

All products, including replacement products, are covered only for the original warranty period. When the warranty on the original product expires, the warranty on the replacement product also expires.

What is Excluded?

Your warranty does NOT cover:

- Labor charges for set up of the unit.
- Product replacement because of misuse, accident, lightning damage, unauthorized repair or other cause not within the control of Wi-Ex®.
- Incidental or consequential damages resulting from the product. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.
- Any modifications or other changes to the product, including but not limited to software or hardware modifications in any way other than as expressly authorized by Wi-Ex® will void this limited warranty.
- Product that has been modified or adapted to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.

Make sure you keep...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this User Guide and keep both nearby. Also, keep the original box and packing material in case you need to return your product.

Before requesting repair service...

If red light is on, system is receiving signals from either the mobile device or the base station transceiver which are too strong for proper operation. Please unplug your system. Re-orient your Signal Antenna and/or Base Unit to reduce the excessive signal source. Plug your system back in. If still solid red, call customer support 1-800-871-1612.

To get warranty service...

Warranty service will be provided by Wi-Ex®. If you believe you need service for your unit, contact Wi-Ex® at 1-800-871-1612 or support@wi-ex.com. A representative will go through a diagnostic checklist with you. If it is determined that the product needs to be returned for service or exchanged, you will receive a return merchandise authorization (RMA) number. The representative will give you complete shipping details. Do not return products to Wi-Ex® without a Return Authorization Number (RMA).

To get out of warranty service...

To obtain out of warranty service, contact Wi-Ex® at 1-800-871-1612 or support@wi-ex.com for information on the possibility of any costs for repair or replacement of out-of-warranty products.

Reminder

Record the model and serial number found on the product below:

Model #: _____

Serial #: _____

Purchase Date: _____